




UR16730NF 15 PSI Pressure Relief Valve Fitting Order

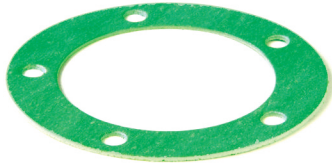

← Top Plate Gasket



← Pressure Valve (fit rubber seal down)



← Valve Centralising Seat (fitted into header tank recess)